


Touch₂O™ Maintenance

If **Kitchen** faucet exhibits very low flow

- A. Remove and clean aerator with a 50% mixture of white household vinegar and water. Some models require wrench to remove aerator.
- B. If low flow persists, unscrew hose from spray head and clean debris from screen - the screen is located just inside the sprayer fitting. (Not all spray heads have a screen)
- C. If low flow persists, remove and clean debris filter inside solenoid valve inlet. Use needle nose pliers or tweezers to remove and reinstall filter.

IMPORTANT: Reinstall aerator to the spray head and screen in solenoid. Failure to reinstall these parts could damage internal parts.

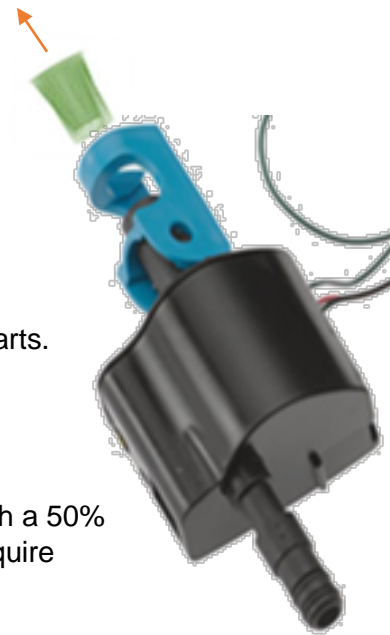

If **Bathroom Sink** faucet exhibits very low flow

- A. If faucet has removable aerator, remove and clean aerator with a 50% mixture of white household vinegar and water. Some models require wrench to remove aerator.

Or

If faucet has flow regulator under cartridge, remove and clean regulator with a 50% mixture of white household vinegar and water.

- B. If low flow persists, remove and clean blue filter inside solenoid valve inlet. Use needle nose pliers or tweezers to remove and reinstall filter.